


PRECISION DELIVERY SYSTEM

QUICK START GUIDE

Featuring TAURUS® Dry

1 Load cartridge into the PDS

Remove cartridge from packaging and unscrew the lid. Firmly screw the cartridge into the underside of the PDS. Do not over tighten. Be sure to keep cartridge upright to prevent spillage.

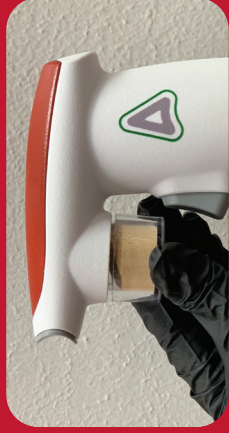

2 Insert precision applicator

Insert the appropriate precision applicator into the opening on front of the PDS.



3 Turn on the PDS to begin application

Move the switch, located on the back of the PDS to the "ON" position.



4 Begin dispensing TAURUS Dry

Begin application into labeled areas by pressing the trigger for the appropriate amount of time. The trigger can be held down to dispense a continuous flow into a large void if necessary.



5 Average dispense rate: 0.1 grams per 2 seconds

Individual placements range from 0.1 – 3 grams per placement based on the species and site of application. Be careful to NOT use the PDS in the upside-down position to reduce chances of accidental emptying of cartridge. See label for application rates.



6 Replacement of empty cartridges

To replace an empty cartridge, simply unscrew the used cartridge and replace ONLY with CSI dry flowable cartridges.



7 Discard empty cartridges

Discard each empty cartridge after use. Cartridges are not reusable. Do NOT refill with any products or use any products except CSI dry flowable cartridges in the PDS.



8 Proper storage for future use

When application is complete, remove the cartridge from the PDS and store cartridge in the original box or in the pocket of the holster.



THE PDS IS INTENDED FOR USE WITH CSI DRY FLOWABLES ONLY.

 **Control Solutions Inc.**
A member of the ADAMA Group

To learn more visit CSI-PDS.COM.
 @csipest  @csi_pest